



NISSAN WINGROAD



ENGINE MAINTENANCE

- ⌘ Replace engine oil (API SM/SL 5W-30)
- ⌘ Replace engine oil filter
- ⌘ Inspect cooling system
- ⌘ Clean air cleaner filter (Dry paper type)

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake and CVT trans-axle fluids
(For level and leaks)
 - ⌘ Inspect brake and exhaust systems
 - ⌘ Inspect steering gear and linkage, axle and suspension parts and driveshafts for damage, loose or missing parts
 - ⌘ Inspect wheel alignment (If necessary rotate and balance wheels)
 - ⌘ Inspect brake pads, rotors and other brake components
 - ⌘ Inspect brake linings, drums and other brake components
- >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⌘ Inspect foot brake and parking brake (For free play, stroke and operation)
- ⌘ Lubricate locks, hinges & hood latch
- ⌘ Inspect seat belt, buckles, retractors, anchors and adjuster
- ⌘ Clean or replace ventilation filter (If fitted)
- ⌘ Replace brake fluid (Severe use only)



NISSAN WINGROAD



ENGINE MAINTENANCE

- ⌘ Replace engine oil (API SM/SL 5W-30)
- ⌘ Replace engine oil filter
- ⌘ Inspect and adjust drive belts
- ⌘ Check and correct engine coolant mixture ratio
- ⌘ Inspect cooling system
- ⌘ Inspect fuel lines
- ⌘ Clean air cleaner filter (Dry paper type)
- ⌘ Inspect EVAP vapour lines
- ⌘ Inspect heated oxygen sensors 1 and 2

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake and CVT trans-axle fluids (For level and leaks)
- ⌘ Replace brake fluid
- ⌘ Inspect brake booster vacuum hoses, connections and check valve >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⌘ Inspect brake and exhaust systems
- ⌘ Inspect steering gear and linkage, axle and suspension parts and drive shafts
- ⌘ Inspect wheel alignment (If necessary rotate and balance wheels)
- ⌘ Inspect brake pads, rotors and other brake components
- ⌘ Inspect brake linings, drums and other brake components
- ⌘ Inspect foot brake and parking brake (For free play, stroke and operation)
- ⌘ Lubricate locks, hinges and hood latch
- ⌘ Inspect seat belt, buckles, retractors, anchors and adjuster
- ⌘ Replace ventilation filter (If fitted)



NISSAN WINGROAD



ENGINE MAINTENANCE

- ⚙️ Replace engine oil (API SM/SL 5W-30)
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Replace air cleaner filter
(Viscous or dry type)

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake and CVT trans-axle fluids
(For level and leaks)
- ⚙️ Inspect brake and exhaust systems
- ⚙️ Inspect steering gear and linkage, axle and suspension parts and driveshafts
- ⚙️ Inspect wheel alignment (If necessary rotate and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect foot brake and parking brake
(For free play, stroke and operation)
- ⚙️ Lubricate locks, hinges and hood latch
- ⚙️ Inspect seat belt, buckles, retractors, anchors and adjuster
- ⚙️ Clean or replace ventilation filter (If fitted)
- ⚙️ Replace brake fluid (Severe use only)



NISSAN WINGROAD



ENGINE MAINTENANCE

- ⚙️ Replace engine oil (API SM/SL 5W-30)
- ⚙️ Replace engine oil filter
- ⚙️ Inspect and adjust drive belts
- ⚙️ Inspect cooling system
- ⚙️ Replace engine coolant
(Use Nissan Genuine Engine Coolant)
- ⚙️ Inspect fuel lines
- ⚙️ Clean air cleaner filter (Dry paper type)
- ⚙️ Inspect EVAP vapour lines
- ⚙️ Inspect heated oxygen sensors 1 and 2

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake and CVT trans-axle fluids
(For level and leaks)
- ⚙️ Replace brake fluid
- ⚙️ Inspect brake booster vacuum hoses,
connections and check valve >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect brake and exhaust systems
- ⚙️ Inspect steering gear and linkage, axle and
suspension parts and drive shafts
- ⚙️ Inspect wheel alignment (If necessary rotate
and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake
components
- ⚙️ Inspect brake linings, drums and other brake
components
- ⚙️ Inspect foot brake and parking brake
(For free play, stroke and operation)
- ⚙️ Lubricate locks, hinges and hood latch
- ⚙️ Inspect seat belt, buckles, retractors,
anchors and adjuster
- ⚙️ Replace ventilation filter (If fitted)



NISSAN WINGROAD



ENGINE MAINTENANCE

- ⚙️ Replace engine oil (API SM/SL 5W-30)
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Clean air cleaner filter (Dry paper type)

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake and CVT trans-axle fluids
(For level and leaks)
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect steering gear and linkage, axle and suspension parts and driveshafts
- ⚙️ Inspect wheel alignment (If necessary rotate and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect foot brake and parking brake
(For free play, stroke and operation)
- ⚙️ Lubricate locks, hinges and hood latch
- ⚙️ Inspect seat belt, buckles, retractors, anchors and adjuster
- ⚙️ Clean or replace ventilation filter (If fitted)
- ⚙️ Replace brake fluid (Severe use only)



NISSAN WINGROAD



ENGINE MAINTENANCE

- Replace engine oil (API SM/SL 5W-30)
- Replace engine oil filter
- Inspect and adjust drive belts
- Check and correct engine coolant mixture ratio
- Inspect cooling system
- Replace air cleaner filter (Viscous or dry type)
- Inspect fuel lines
- Replace spark plugs (Platinum tip type)
- Inspect EVAP vapour lines
- Inspect heated oxygen sensors 1 and 2

CHASSIS AND BODY MAINTENANCE

- Inspect brake and CVT trans-axle fluids (For level and leaks)
- Inspect CVT fluid deterioration rate for CVT transmission and if out of range, replace the NS-2 fluid (Severe use only) >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Replace brake fluid
- Inspect brake booster vacuum hoses, connections and check valve
- Inspect brake and exhaust systems
- Inspect steering gear and linkage, axle and suspension parts and drive shafts
- Inspect wheel alignment (If necessary rotate and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Inspect foot brake and parking brake (For free play, stroke and operation)
- Lubricate locks, hinges and hood latch
- Inspect seat belt, buckles, retractors, anchors and adjuster
- Replace ventilation filter (If fitted)



NISSAN WINGROAD



ENGINE MAINTENANCE

- ❑ Replace engine oil (API SM/SL 5W-30)
- ❑ Replace engine oil filter
- ❑ Inspect cooling system
- ❑ Clean air cleaner filter (Dry paper type)

CHASSIS AND BODY MAINTENANCE

- ❑ Inspect brake and CVT trans-axle fluids
(For level and leaks)
- ❑ Inspect brake and exhaust systems
- ❑ Inspect steering gear and linkage, axle and suspension parts and driveshafts
- ❑ Inspect wheel alignment (If necessary rotate and balance wheels)
- ❑ Inspect brake pads, rotors and other brake components
- ❑ Inspect brake linings, drums and other brake components >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ❑ Inspect foot brake and parking brake
(For free play, stroke and operation)
- ❑ Lubricate locks, hinges and hood latch
- ❑ Inspect seat belt, buckles, retractors, anchors and adjuster
- ❑ Clean or replace ventilation filter (If fitted)
- ❑ Replace brake fluid (Severe use only)



NISSAN WINGROAD



ENGINE MAINTENANCE

- Replace engine oil (API SM/SL 5W-30)
- Replace engine oil filter
- Inspect and adjust drive belts
- Replace engine coolant
(Use Nissan Genuine Engine Coolant)
- Inspect cooling system
- Inspect fuel lines
- Clean air cleaner filter (Dry paper type)
- Inspect EVAP vapour lines
- Inspect heated oxygen sensors 1 and 2

CHASSIS AND BODY MAINTENANCE

- Inspect brake and CVT trans-axle fluid
(For level and leaks)
- Replace brake fluid
- Inspect brake booster vacuum hoses,
connections and check valve >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Inspect brake and exhaust systems
- Inspect steering gear and linkage, axle and
suspension parts and drive shafts
- Inspect wheel alignment (If necessary rotate
and balance wheels)
- Inspect brake pads, rotors and other brake
components
- Inspect brake linings, drums and other brake
components
- Inspect foot brake and parking brake
(For free play, stroke and operation)
- Lubricate locks, hinges and hood latch
- Inspect seat belt, buckles, retractors,
anchors and adjuster
- Replace ventilation filter (If fitted)